




Timber and MDF Mantelpieces

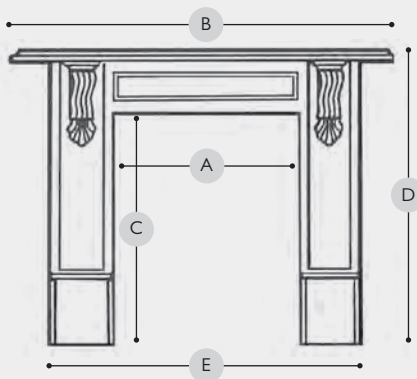


Richmond

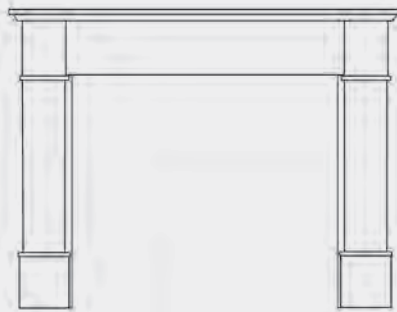


Brompton

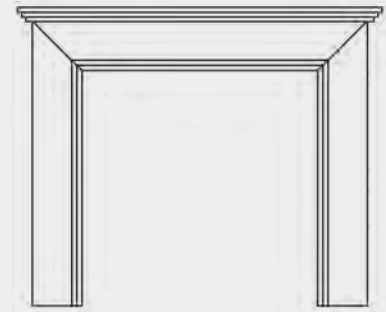


Cranbourne

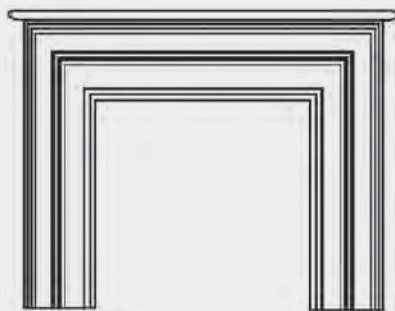

Bouvier

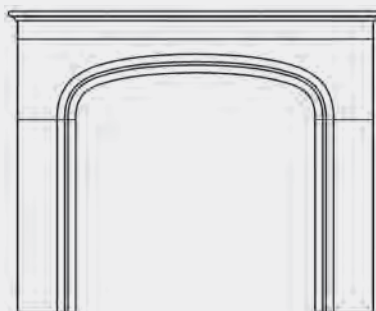


Bowland

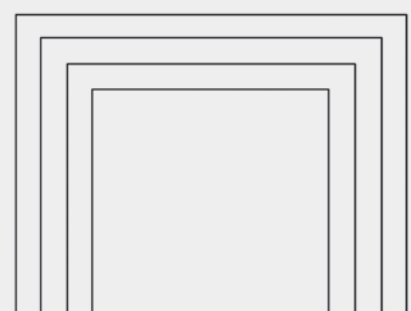


Nouveaux



Rosette

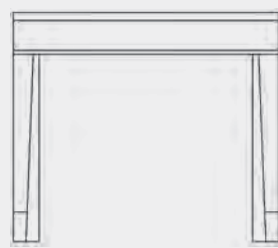

Sandgate

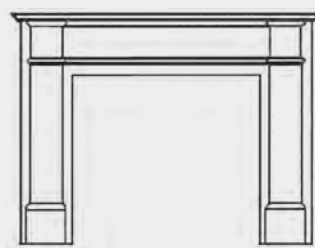

Windsor



Milano

MODEL	A	B	C	D	E
RICHMOND 700 (STD)	900	1400	900	1170	1320
RICHMOND 850	1050	1600	950	1230	1470
RICHMOND 6000TRS	1130	1650	950	1230	1555
RICHMOND 550TRS Classic	950	1450	1000	1280	1370
ROSETTE 700 (STD)	900	1450	935	1245	1305
ROSETTE 850	1050	1600	950	1270	1435
ROSETTE 6000TRS	1130	1650	950	1270	1530
ROSETTE 550TRS Classic	950	1545	1000	1310	1350
MILANO 700 (STD)	900	1565	900	1215	1445
MILANO 850	1050	1715	950	1265	1595
BOUVIER 700 (STD)	900	1550	900	1225	1460
BOUVIER 850	1050	1700	950	1270	1610
BOUVIER 550	950	1600	1000	1325	1510
BOUVIER 6000	1130	1775	950	1275	1690

All measurements in millimetres.

MODEL	A	B	C	D	E
NOUVEAU 700 (STD)	900	1400	890	1140	1400
NOUVEAU 850	1050	1600	950	1225	1600
NOUVEAU 550TRS	1050	1600	950	1225	1600
SANDGATE 700 (STD)	1050	1300	900	1120	1300
SANDGATE 850	1150	1400	1030	1250	1400
SANDGATE 550TRS	1150	1400	1030	1250	1400
WINDSOR 700 (STD)	900	1500	900	1165	1400
WINDSOR 850	1050	1650	950	1215	1550
WINDSOR 550TRS	1050	1650	950	1215	1550
WINDSOR 6000TRS	1130	1700	950	1215	1630
BOWLAND	915	1429	915	1149	1362
CRANBOURNE	915	1415	915	1159	1301
BROMPTON 56	900	1422	900	1166	1350
BROMPTON 63	1080	1602	950	1216	1509



HEAT & GLO
No one builds a better fire